

- 1 X2 (36cm)
- 2 X6 (30cm)
- 3 X6 (27cm)

- 4 (20cm)
- **5** X4 (16cm)
- 6 X12
- **7** X16

- 8X **8**
- 9 X8
- 10 X4 11 X10
- 12 X22

- 13 X1
- **1**4 X1 **1**5 X1 **1**6 X1
- **1** X16




Put No 11 to one of the end of No 2 and No 4






Insert No. 4 into No. 10, and make sure that the height of 4 pieces is consistent.



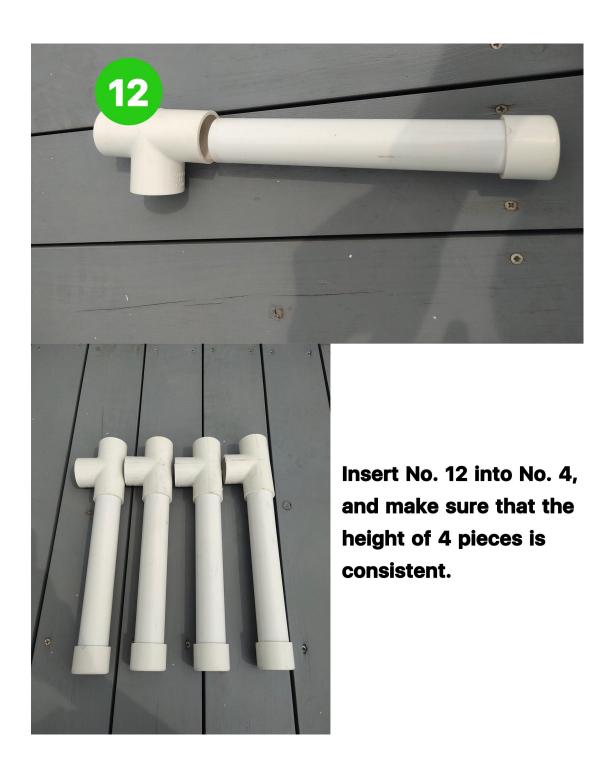

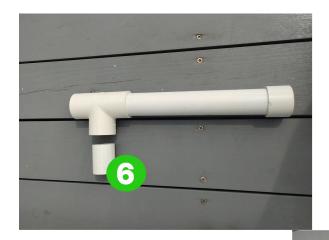


## Insert number 6 into number 12

Install No. 8 to No. 6 as shown




Determine the installation direction

## Install both legs to both ends of No. 1

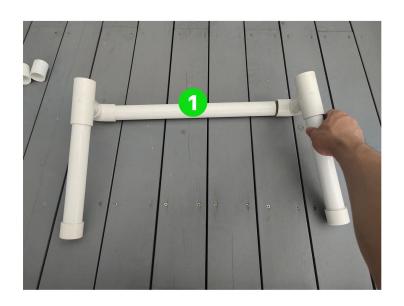

Install the other end as shown

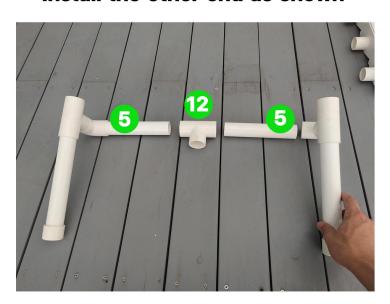




Insert No. 6 into No. 12, making sure the height is the same on both sides



Insert number 12 into the other end of number 6 to make sure the height is the same




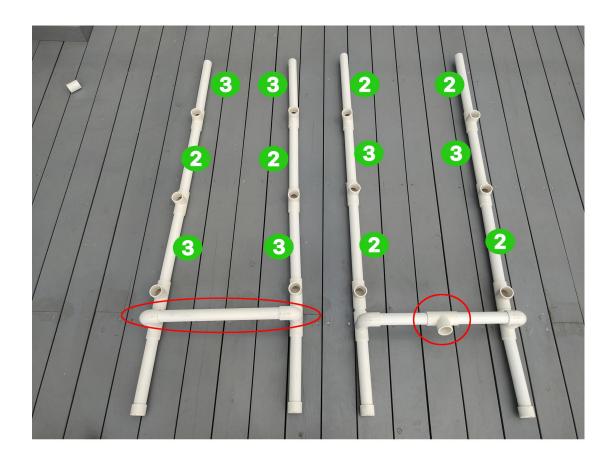


As shown in the figure, install the pipes with the corresponding specifications in order to ensure that the installation direction is correct and the height is consistent.

Install No. 9 into the bracket in turn




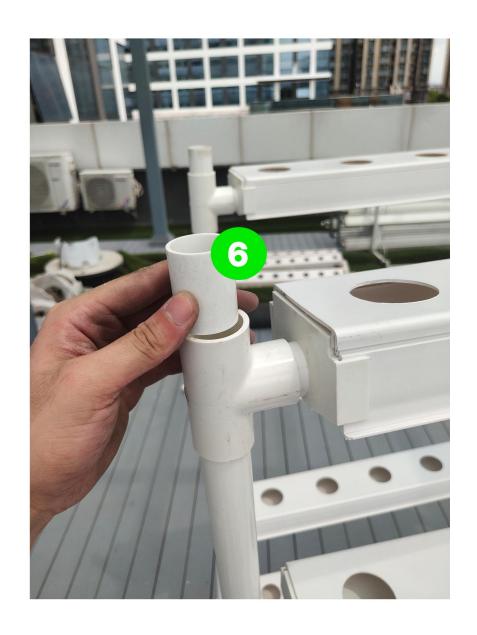

Install No. 6 to the four tops

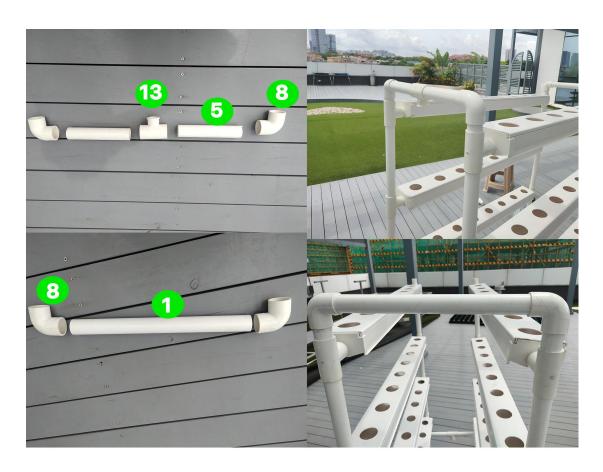

As shown in the figure, install in sequence.

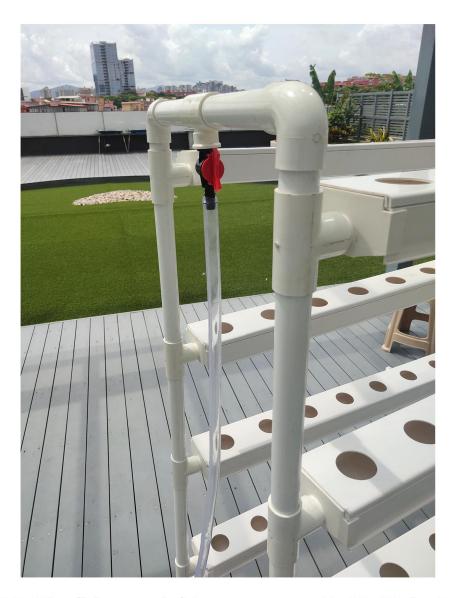

No14 (Flexible conduit) connect to No15 (Valve) and then connect to No 13



